


Example of a non-home automation diverted line

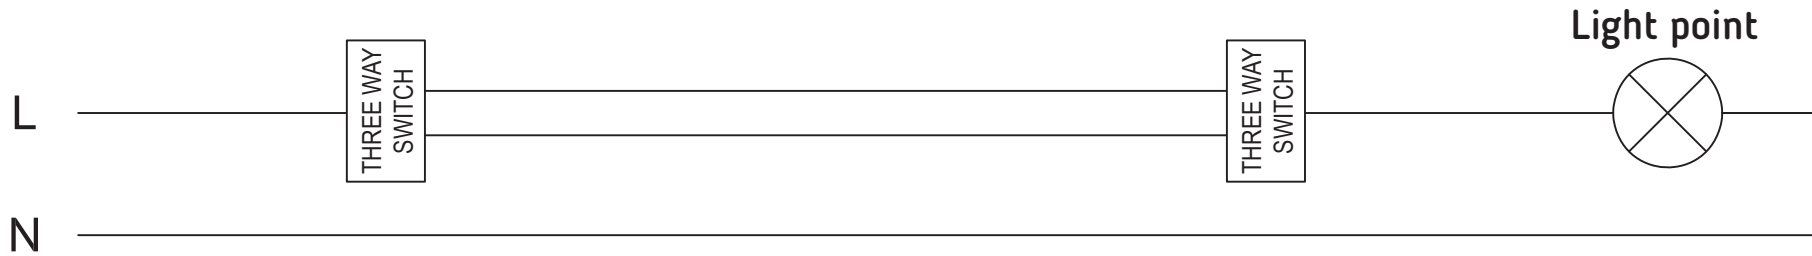

Example of a diverted line with EZON.IO SWITCH RELAY



Join together all the wires previously connected to the diverter. This clamp is not included in the package but is available in our store.

Join together all the wires previously connected to the diverter. This clamp is not included in the package but is available in our store.

